
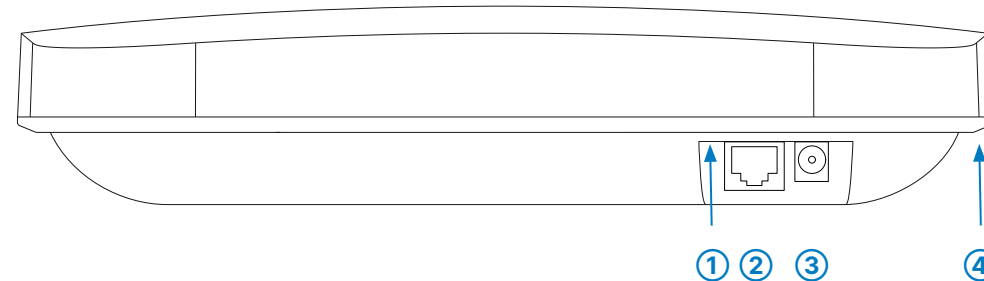



## Hardware Quick Reference

# LANCOM LW-700

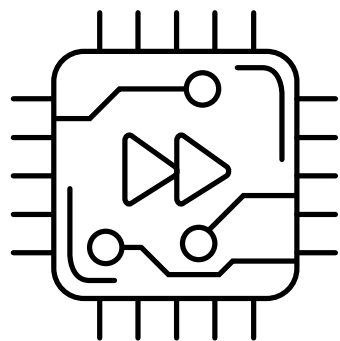

- 1 Reset button**  
Pressed up to 5 seconds: Device restart  
  
Pressed longer than 5 seconds:  
Configuration reset and device restart
- 2 TP-Ethernet interfaces ETH**  
Connect the ETH interface to other network components using a suitable Ethernet cable.
- 3 Power supply connection socket**  
Connect a suitable 12V power supply unit here.
- 4 Kensington Lock holder**  
For mechanical theft protection of the access point

 RST



**Before initial startup, please make sure to take notice of the information regarding the intended use in the enclosed installation guide!**

**Please note that support for third-party accessories is not provided.**




**Please observe the following when setting up the device**

- Do not place any objects on the top of the device or stack several devices
- Wall and ceiling mounting using the supplied wall mount

# Hardware Quick Reference

## LANCOM LW-700

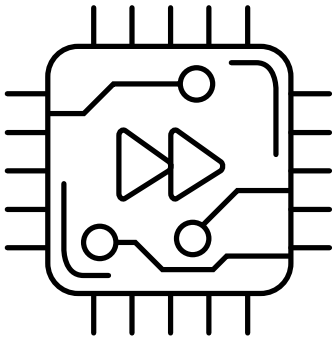

A Power		B WLAN Link	
Off	Device switched off	Off	No Wi-Fi network defined or Wi-Fi module deactivated. The Wi-Fi module is not transmitting beacons.
Green, permanently*	Device operational, resp. device paired / claimed and LANCOM Management Cloud (LMC) accessible.	Green, permanently	At least one Wi-Fi network defined and Wi-Fi module activated. The Wi-Fi module is transmitting beacons.
Blue / red, alternatingly blinking	DHCP error or DHCP server not accessible (only when configured as DHCP client)	Green, inverse flashing	Number of flashes = number of connected Wi-Fi stations
1x green inverse blinking*	Connection to the LMC active, pairing OK, claiming error.	Green, blinking	DFS scanning or other scan procedure
2x green inverse blinking*	Pairing error, resp. LMC activation code / PSK not available.	Red, blinking	Wi-Fi module hardware error
3x green inverse blinking*	LMC not accessible, resp. communication error.	Yellow / green, blinking alternating with power LED	The access point searches for a WLAN controller
Purple, blinking	Firmware update		
Purple, permanently	Device booting		
Yellow / green, blinking alternating with WLAN Link LED	The access point searches for a WLAN controller		
Yellow, permanently (after configuration of at least one SSID)	Device is supplied with reduced PoE power		

Hardware	
Power supply	PoE 802.3at, optionally 12 V DC, external power adapter For an overview of the power supplies compatible with your device, see <a href="http://www.lancom-systems.com/kb/power-supplies">www.lancom-systems.com/kb/power-supplies</a> .
Environment	Temperature range 0–40 °C Humidity 0–95 %, non-condensing
Housing	Robust housing made of aluminum and plastic, dimensions 185 × 185 × 39 mm (W x D x H), Kensington lock
Number of fans	None; fanless design, no rotating parts, high MTBF
Interfaces	
ETH1 (PoE)	100M / 1G / 2.5G BaseT, PoE 802.3at
Wi-Fi	
Frequency band	2,400–2,483.5 MHz, 5,150–5,350 MHz, 5,470–5,725 MHz, country-specific restrictions possible.
Transmission rates	
2.4 GHz	2×2 MIMO and 40 MHz channel width with up to 688 Mbps acc. to IEEE 802.11be
5 GHz	2×2 MIMO and 160 MHz channel width with up to 2,882 Mbps acc. to IEEE 802.11be
Radio channels	
2.4 GHz	Up to 13 channels, max. 3 non-overlapping
5 GHz	Up to 19 non-overlapping channels (automatic dynamic channel selection required)
Streams	2×2 Multi-User MIMO for simultaneous control of multiple clients in downlink and uplink
Antennas	Integrated
Package content	
Mounting kit	Mounting kit for wall and ceiling mounting incl. T-Bar mounting clips for mounting on chopped ceilings

\*) The additional power LED statuses are displayed in 5-seconds rotation if the device is configured to be managed by the LANCOM Management Cloud.

The product contains separate components which, as so-called open source software, are subject to their own licenses, in particular the General Public License (GPL). The license information for the device firmware (LCOS LX) can be found via the command line with the command „show 3rd-party-licenses“. If required by the respective license, source files for the affected software components are provided on request. For this purpose, please contact us via e-mail at [gpl@lancom.de](mailto:gpl@lancom.de).

Hereby, LANCOM Systems GmbH | Adenauerstrasse 20/B2 | D-52146 Wuerselen, declares that this device is in compliance with Directives 2014/53/EU, 2014/35/EU, 2011/65/EU, and Regulation (EC) No. 1907/2006. The full text of the EU Declaration of Conformity is available at the following Internet address: [www.lancom-systems.com/doc](http://www.lancom-systems.com/doc)