

# LANCOM R&S®Unified Firewalls

## First installation steps

### Start-up

Your LANCOM R&S®Unified Firewall is configured via a web client. First make sure that the network adapter of your configuration PC is configured for retrieving an IP address automatically. Log into the web client using a current browser (we recommend Google Chrome™ or Mozilla Firefox). To do this, connect via the eth1 interface of the firewall and reach the web client at the URL:

<https://192.168.1.254:3438/>

For the first login, please use the following credentials:

**User:** admin

**Password:** admin

### Setup tutorials

Here are some helpful videos and tutorials to help you set up your LANCOM R&S®Unified Firewall:

<https://www.lancom-systems.com/uf-tutorials>

Alternatively, you can scan this QR code to view it on your smartphone:



**LANCOM**  
SYSTEMS

LANCOM Systems GmbH | A Rohde & Schwarz Company | Adenauerstr. 20/B2 | 52146 Wuersele | Germany | [info@lancom.de](mailto:info@lancom.de) | [www.lancom-systems.com](http://www.lancom-systems.com)

© 2025 LANCOM, LANCOM Systems, LCOS, LANcommunity and Hyper Integration are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and / or omissions. 111917 03/2025