


Mounting Instructions

LANCOM Wall Mount LW-700

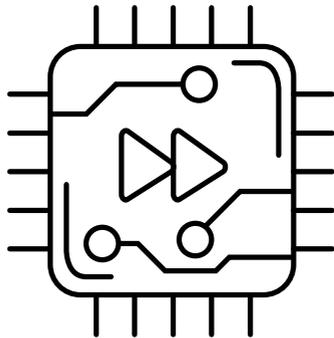

General notes

The LANCOM Wall Mount LW-700 is designed exclusively for mounting a LANCOM LW-700 access point vertically on a wall or horizontally on a ceiling.

The bracket must be mounted on a solid surface that cannot be bent or stretched.

Installation on (pitched) roofs or corrugated roofs as well as installation in other mounting directions/angles is not permitted or not recommended without additional securing of the access point to the bracket.

In addition, the LANCOM Wall Mount LW-700 can be mounted on a suspended ceiling using the two T-bar clips included in the scope of delivery. Here too, the access point must be additionally secured to the mount.


Wall or ceiling mounting of the LANCOM Wall Mount LW-700 without T-bar clips

Place the bracket **A** in the desired position on the wall or ceiling so that its base rests on the wall or ceiling. The raised areas on the corners of the bracket, to which the access point will later be attached, must point towards you.

For wall mounting, the bracket must be aligned so that the keyhole-shaped recesses **1** point upwards with their insertion openings. Use the LANCOM Wall Mount LW-700 as a drilling template.

Depending on the condition of the surface, select 4 suitable pan-head screws M4×35 and, if necessary, suitable dowels for mounting the bracket.

The bracket is attached through the 4 holes **2** near the outside of the bracket, or optionally through the slotted holes arranged concentrically to the center of the bracket.

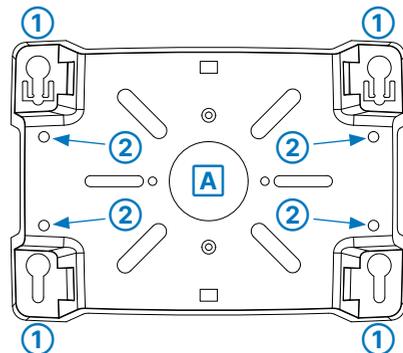


Mounting the access point on the LANCOM Wall Mount LW-700

The access point is already prepared for mounting on the bracket.

When positioning the access point, lead the cables out to the side or upwards behind the access point housing. Insert the access point into the bracket so that the M3×10 screws ③ already pre-assembled on the device engage in the insertion openings of the keyhole-shaped recesses in the bracket.


Then push the access point downwards ④ until it audibly clicks into the catches ⑤.

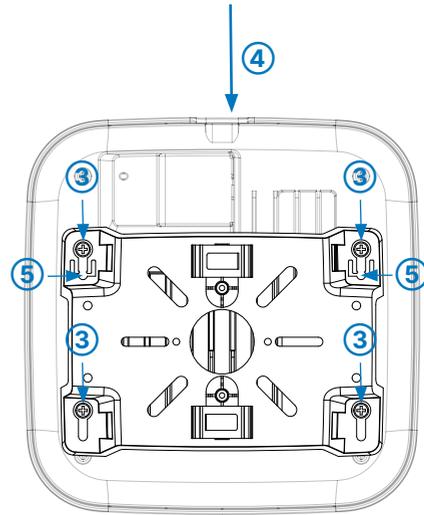

Preparation of the bracket for mounting the access point on a suspended ceiling using the T-bar clips included in the scope of delivery

Place the bracket **A** in front of you so that it is facing downwards with the raised areas at the corners.

Then insert both T-bar clips ⑥ one after the other into the rectangular recesses ⑦ of the bracket so that the guides of the clips ⑧ hook into them and fasten the clips into place from the other side using the enclosed screws M3×10 ⑨.

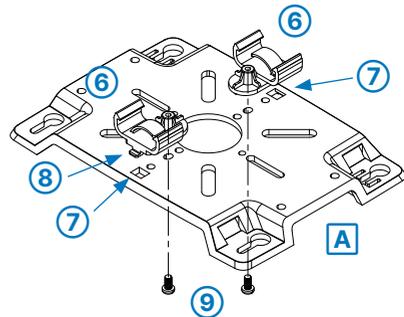


Then mount the access point on the bracket as described in the previous chapter.

Mounting the bracket with attached access point on a suspended ceiling

Place the access point with the mounted bracket on the ceiling rail so that the hooks ⑩ of both T-bar clips are above the rail on one side.

Then push the access point together with the bracket on the other side of the rail upwards until both T-bar clips on this side audibly click into place on the rail.

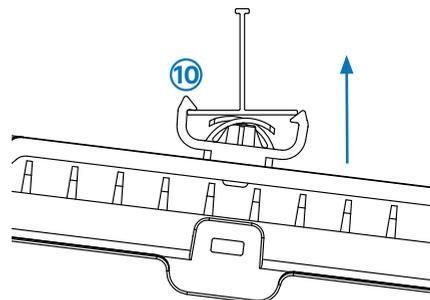


Securing the access point

Secure the access point with a separately available Kensington Lock.

Removing the bracket with mounted access point from the suspended ceiling

To remove the access point together with the bracket from the suspended ceiling, first remove all additional safety devices.

Then carefully push the access point and bracket horizontally at a 90° angle to the direction of the ceiling rail and then pull the access point and bracket down on the other side.

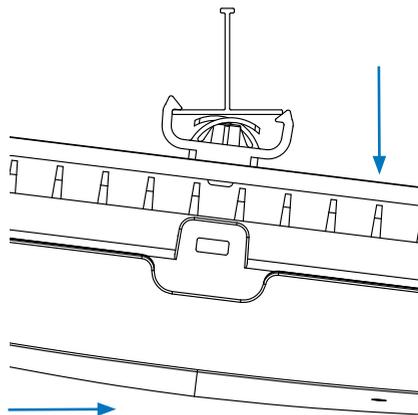


Removing the access point from the bracket

After removing it from the ceiling rail, pull both the access point and the bracket forcefully in opposite directions ④ until the screws ③ of the access point are released from the locking mechanisms ⑤ of the bracket.

If necessary, use a tool to carefully bend the catches slightly open.

You can then remove the access point through the insertion openings.

To release the access point from the wall-mounted bracket, push the access point upwards with firm pressure. The access point can then be removed to the front.

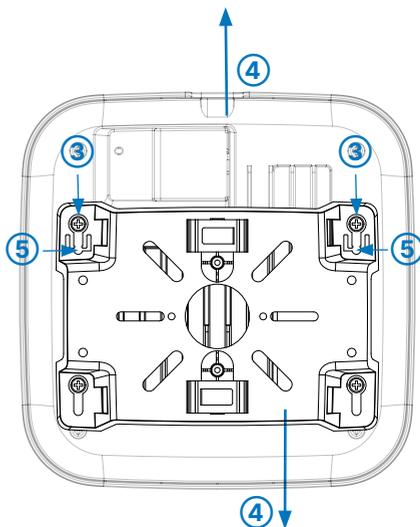

LANCOM Systems GmbH
A Rohde & Schwarz Company
Adenauerstr. 20/B2

52146 Wuersele | Germany
info@lancom.de | lancom-systems.com

LANCOM, LANCOM Systems, LCOS, LANcommunity, LANCOM Service LANcare, LANCOM Active Radio Control, and AirLancer are registered trademarks. All other names or descriptions used may be trademarks or registered trademarks of their owners. This document contains statements relating to future products and their attributes. LANCOM Systems reserves the right to change these without notice. No liability for technical errors and/or omissions. 112434 05/2025